


# DTS 3021/31(SS) 230V

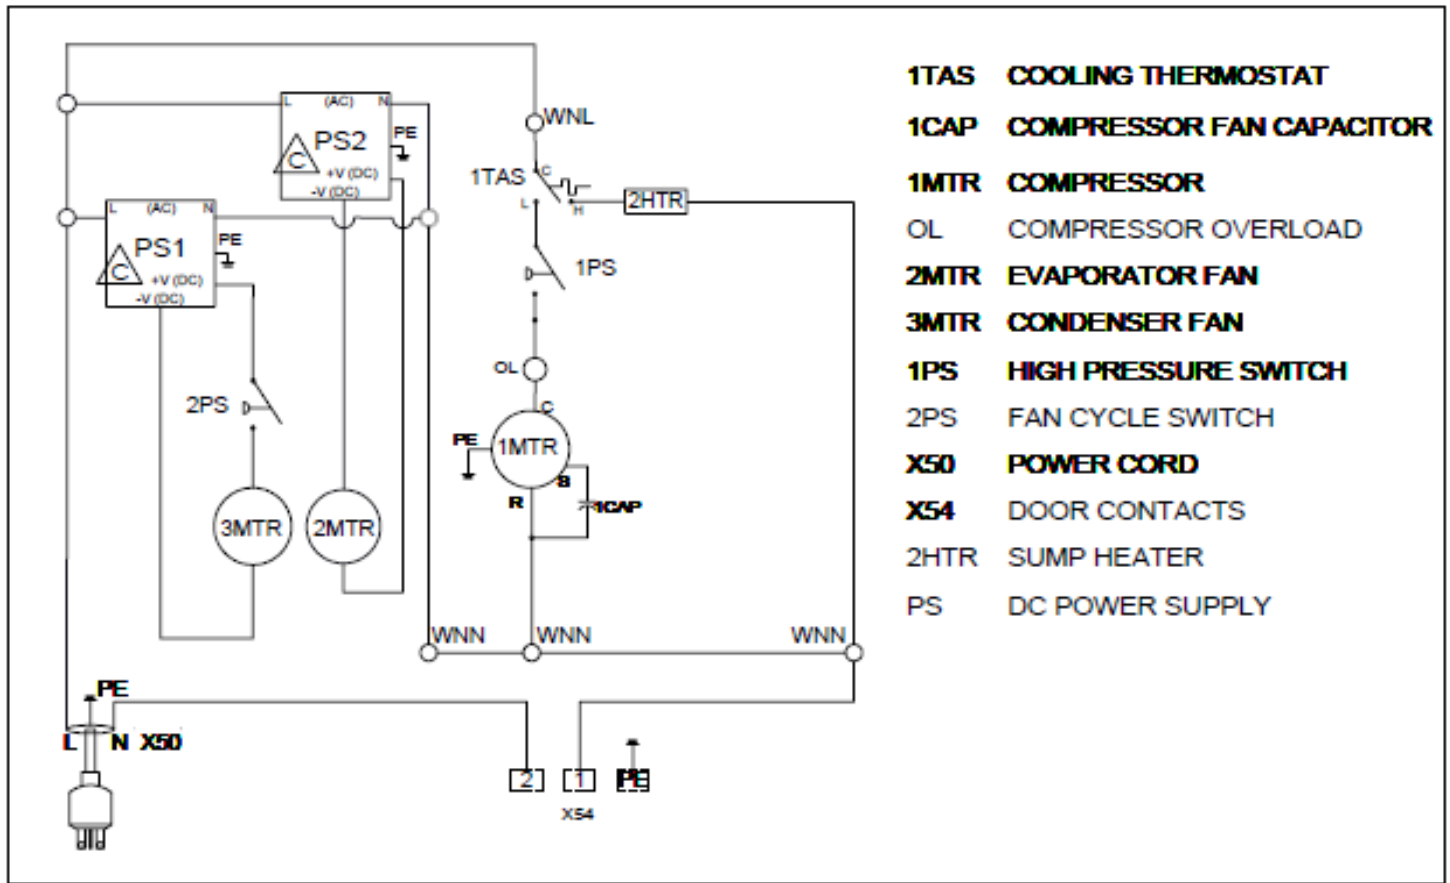

- 1TAS** COOLING THERMOSTAT
- 1CAP** COMPRESSOR FAN CAPACITOR
- 1MTR** COMPRESSOR
- OL** COMPRESSOR OVERLOAD
- 2MTR** EVAPORATOR FAN
- 3MTR** CONDENSER FAN
- 1PS** HIGH PRESSURE SWITCH
- 2PS** FAN CYCLE SWITCH
- X50** POWER CORD
- X54** DOOR CONTACTS
- 2HTR** SUMP HEATER
- PS** DC POWER SUPPLY

<b>NOTICE</b>	<p>Prior to installation/operation of this unit, read installation/operation manual completely. Installation/operation should only be completed by properly trained personnel</p> <p>Minimum distance to obstructions – 200mm (Exterior) - 100mm (Internal)</p> <p>DO NOT APPLY external voltage to door contact switch. Damage to unit may result.</p>
<b>ACHTUNG</b>	<p>Lesen Sie vor der Installation / dem Betrieb dieses Geräts die Installations- / Bedienungsanleitung vollständig durch. Installation / Betrieb sollte nur von entsprechend geschultem Personal durchgeführt werden</p> <p>Mindestabstand zu Hindernissen - 200 mm (Außen) - 100 mm (Innen)</p> <p>KEINE externe Spannung an den Türkontaktschalter anlegen. Schäden am Gerät können die Folge sein.</p>
<b>NOTICE</b>	<p>Avant l'installation / l'utilisation de cet appareil, lisez le manuel d'installation / d'utilisation complètement. L'installation / opération ne doit être effectuée que par du personnel dûment formé</p> <p>Distance minimale par rapport aux obstacles - 200 mm (supérieur) - 100 mm (interne)</p> <p>NE PAS APPLIQUER de tension externe au commutateur de contact de porte. Des dommages à l'appareil peuvent en résulter.</p>

## Unit Dimensions / Air Flow / Sealing Gaskets

